




CONTENTS

INSTALLATION INSTRUCTIONS	04
NOT CONNECTED TO A CHIMNEY FLUE	
■ DETAILED PLAN ■ CLEARANCE DISTANCES FROM COMBUSTIBLE MATERIALS	
■ CLEARANCE DISTANCES FROM COMBUSTIBLE MATERIALS	
INSTALLATION INSTRUCTIONSconnected to a chimney flue	10
■ DETAILED PLAN	10
■ CLEARANCE DISTANCES FROM COMBUSTIBLE MATERIALS	
■ FIREPLACE INSTALLATION	
■ DAMPER RULES	15
INSTALLATION INSTRUCTIONS RETRO-FIT: OPEN WOOD-BURNING DOMOFOCUS ALREADY INSTALLED	17
■ DETAILED PLAN	17
■ CLEARANCE DISTANCES FROM COMBUSTIBLE MATERIALS	19
■ BEFORE BURNER INSTALLATION	20
■ DAMPER RULES	22

Detailed plan

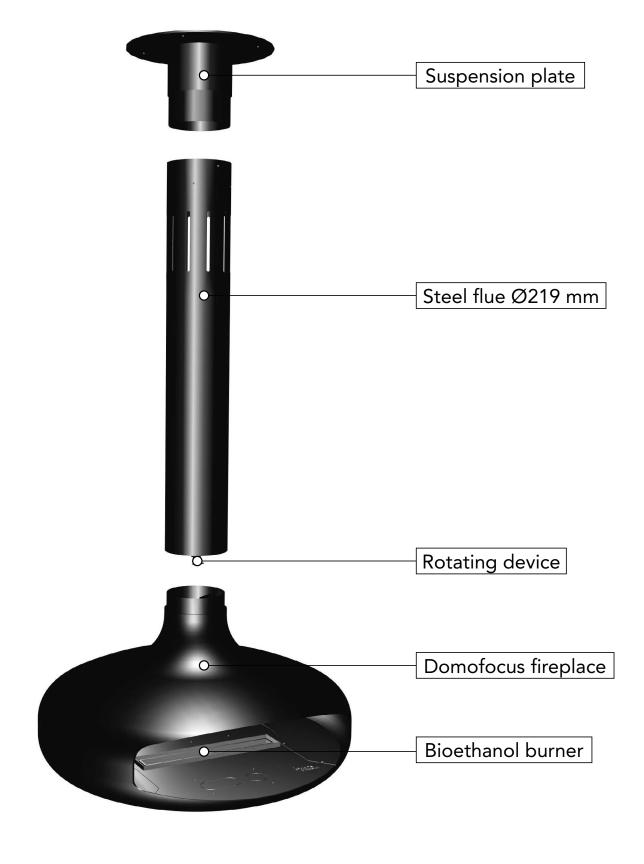


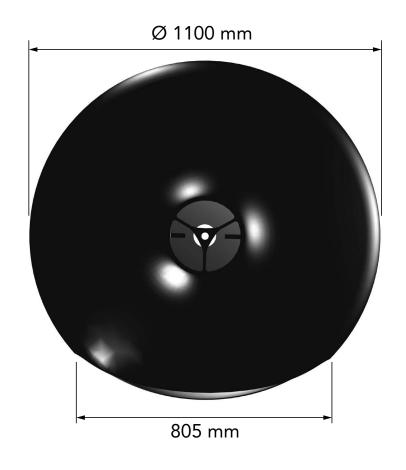

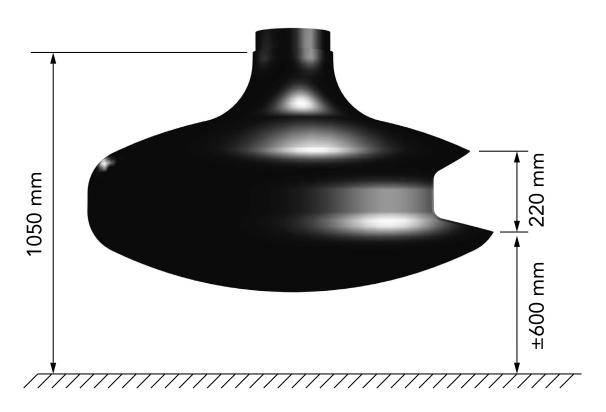


NOT CONNECTED TO A CHIMNEY FLUE


• Clearance distances from combustible materials

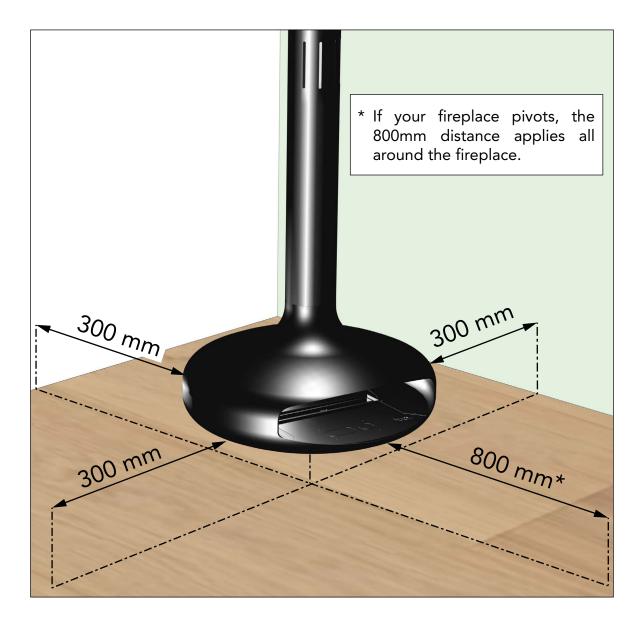



 It is necessary to keep the fireplace away from a bay-window, even though the latter is considered non-flammable. The required distance is 500 mm. This distance can be reduced if special glass is used (ask your glass supplier for more details).


• Fireplace installation

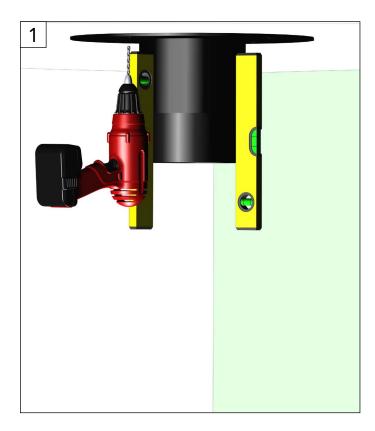


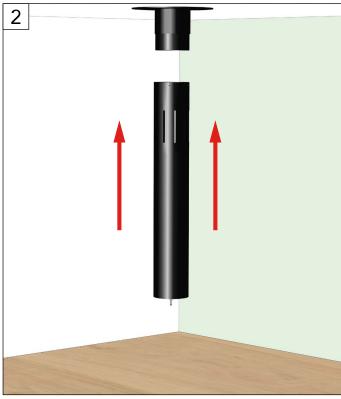


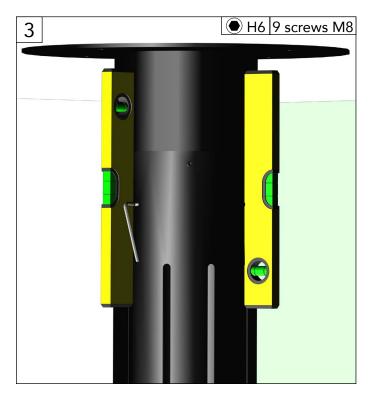

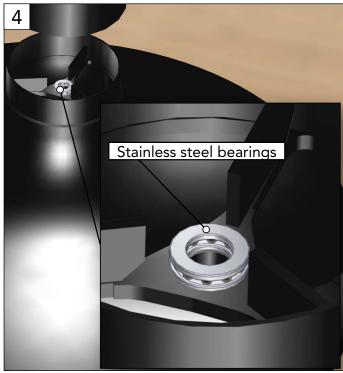

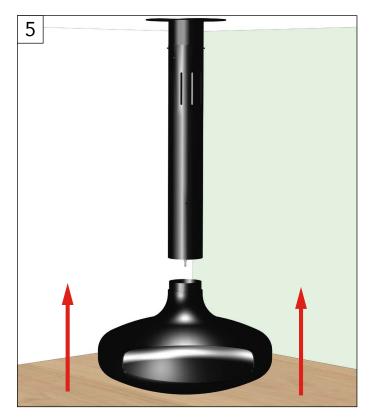


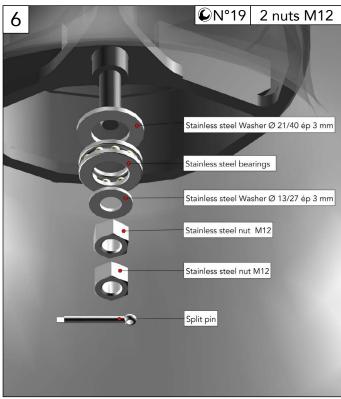


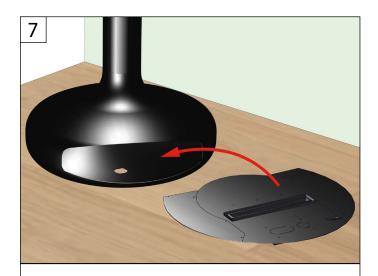


Once your fireplace is installed, please refer to the instructions for the installation of the ethanol burner.

Detailed plan

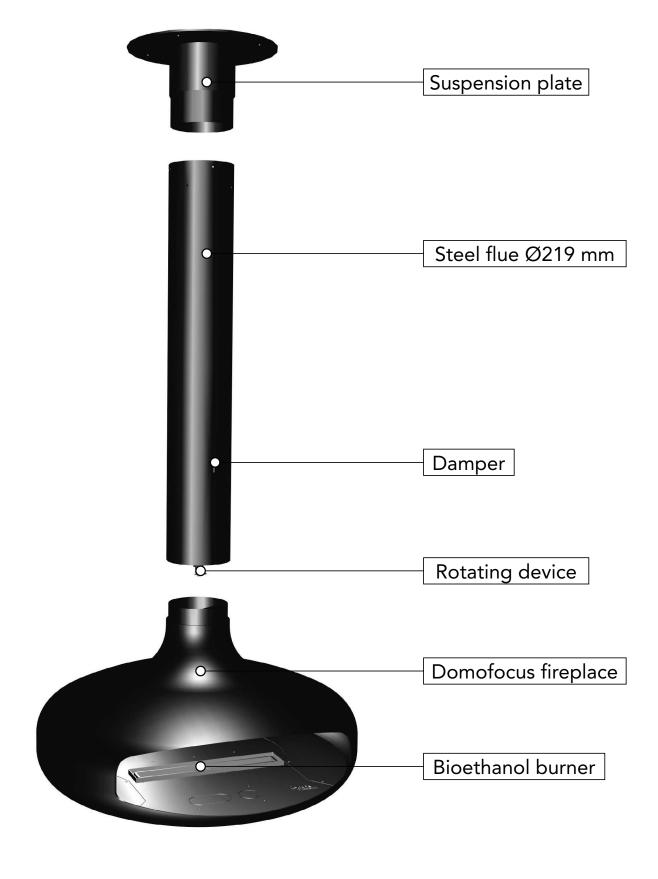


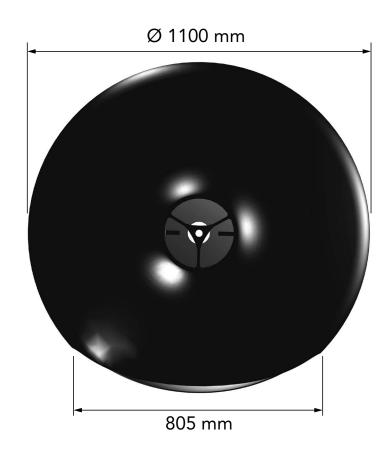

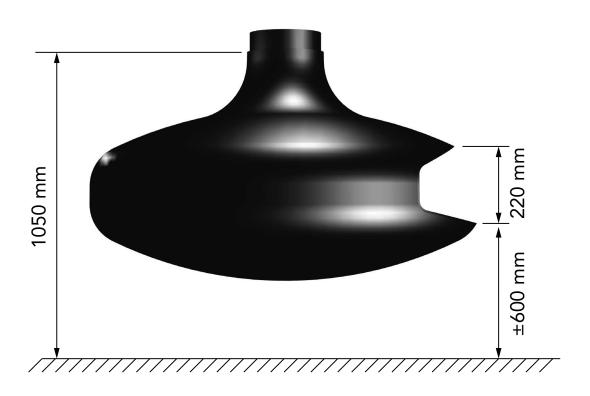


CONNECTED TO A CHIMNEY FLUE


• Clearance distances from combustible materials

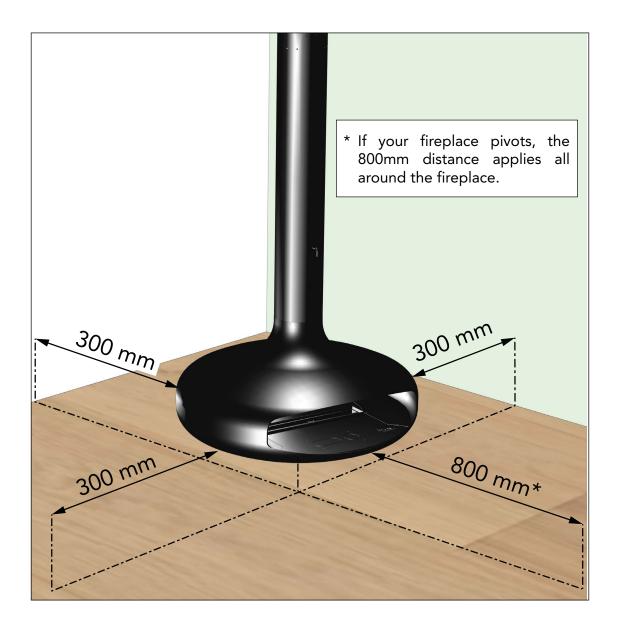



• It is necessary to keep the fireplace away from a bay-window, even though the latter is considered non-flammable. The required distance is **500 mm**. This distance can be reduced if special glass is used (ask your glass supplier for more details).

Fireplace installation

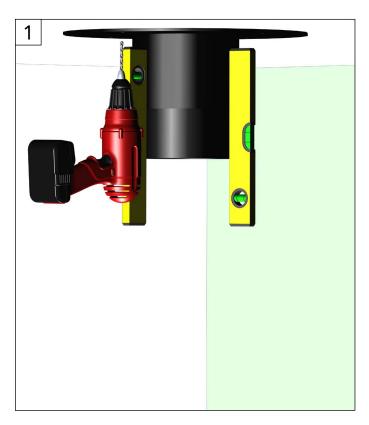


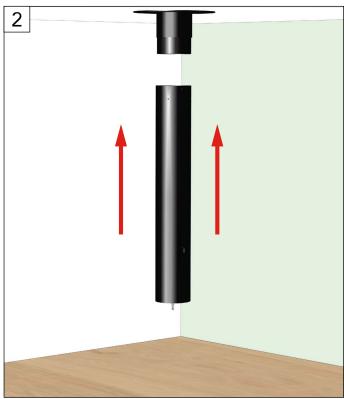


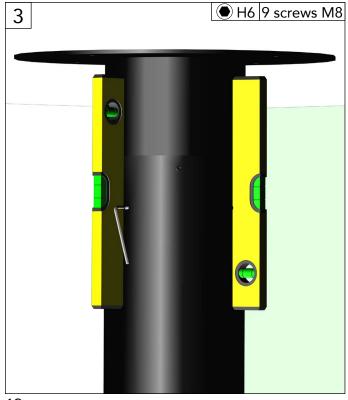


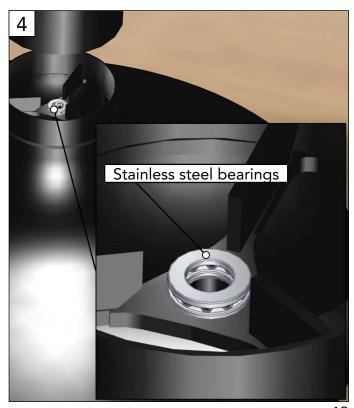

13 13

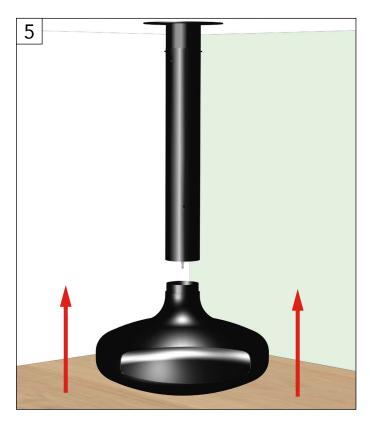

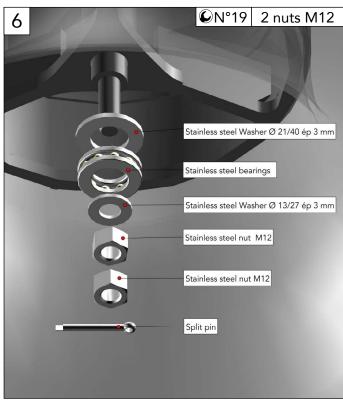

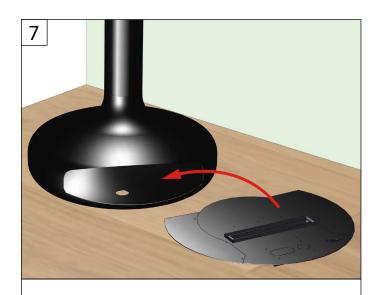

Once your fireplace is installed, please refer to the instructions for the installation of the ethanol burner.


CONNECTED TO A CHIMNEY FLUE

Damper rules

The damper, located on the flue, is used for both regulating and blocking the smoke flue during periods of non-operation. Before igniting, check the position of the damper, with the handle indicating the position of the damper. To change the position, pull the damper towards oneself, turn it slightly, and push it back to achieve one of the 4 possible positions of the flap disc inside the flue.


To ensure proper operation of the appliance and to benefit from the guarantee, it is **STRICTLY** forbidden to use position **0** as it would damage the burner.

We recommend using only positions **1** and **2**. Position **3** may cause excessive draw, potentially disrupting the flame; therefore, we advise not using it.

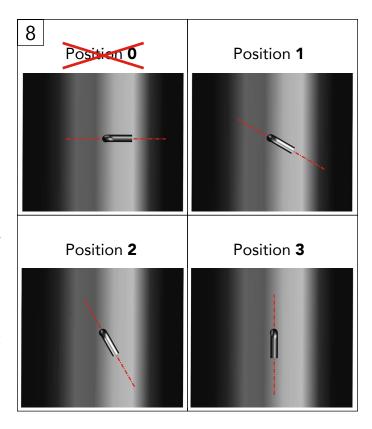



RETRO-FIT : OPEN WOOD-BURNING DOMOFOCUS ALREADY INSTALLED

Detailed plan

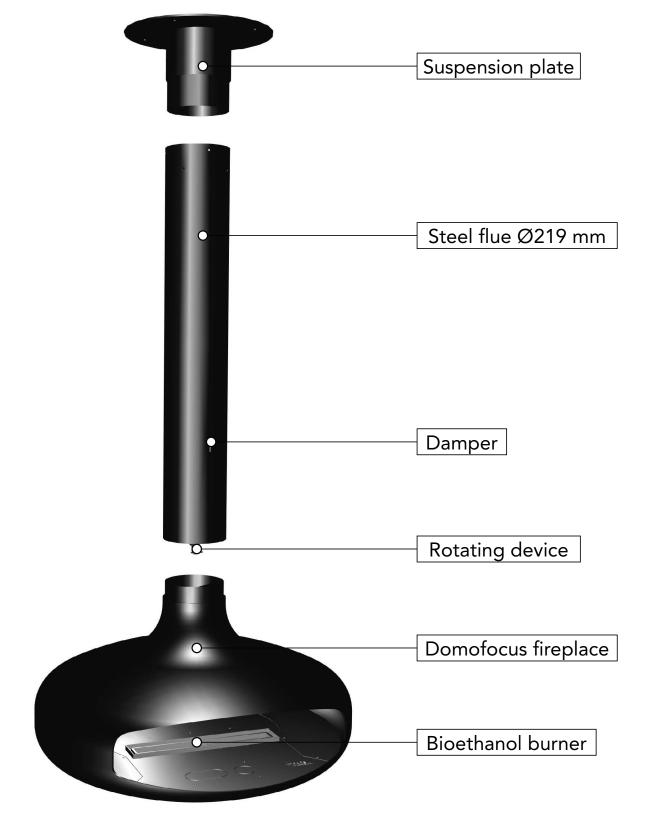


RETRO-FIT: OPEN WOOD-BURNING DOMOFOCUS ALREADY INSTALLED

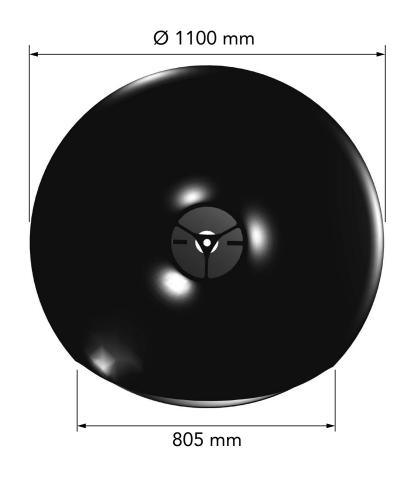

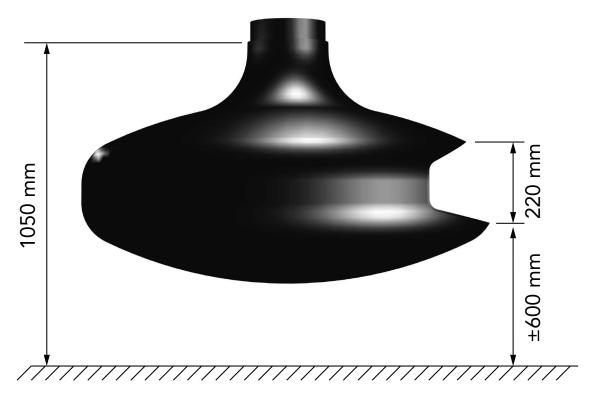

RETRO-FIT: OPEN WOOD-BURNING DOMOFOCUS ALREADY INSTALLED

Clearance distances from combustible materials

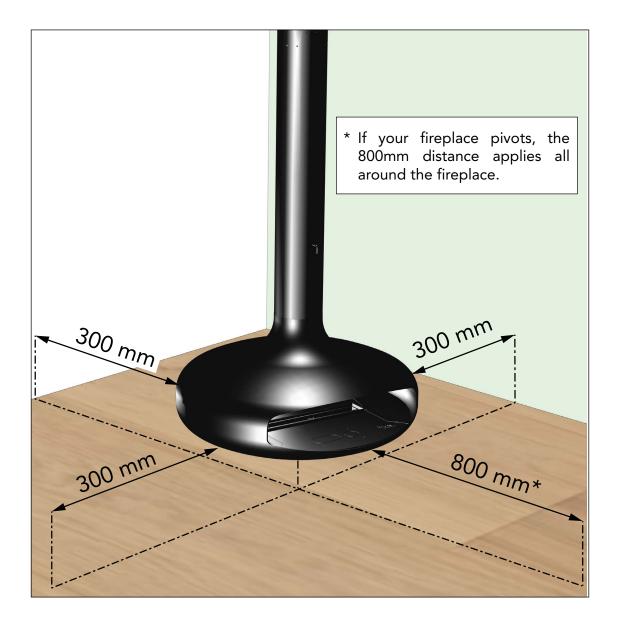


• It is necessary to keep the fireplace away from a bay-window, even though the latter is considered non-flammable. The required distance is **500 mm**. This distance can be reduced if special glass is used (ask your glass supplier for more details).


RETRO-FIT: OPEN WOOD-BURNING DOMOFOCUS ALREADY INSTALLED


• Before burner installation

Before installing the burner inside the fireplace, it is **IMPERATIVE** to:


- 1. Sweep the chimney.
- 2. Remove the fireplace grate.
- 3. Remove the ashtray hatch.
- 4. Replace the rotation device bearings with stainless steel bearings.

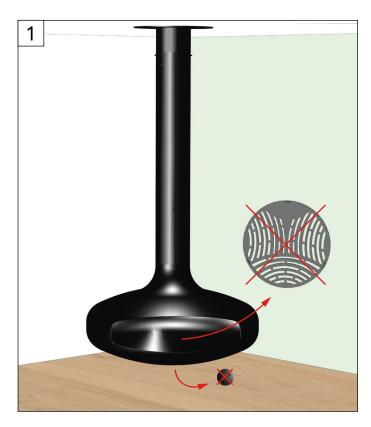


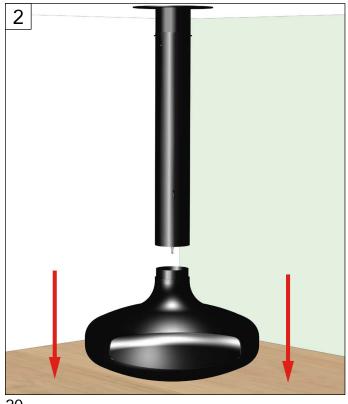


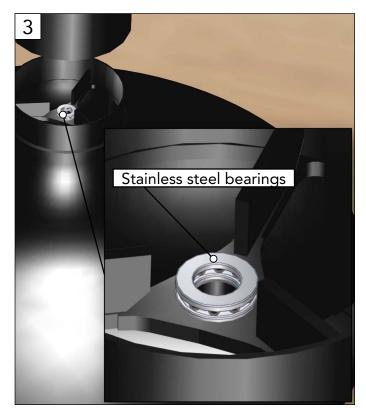

INSTALLATION INSTRUCTIONS RETRO-FIT: OPEN WOOD-BURNING DOMOFOCUS ALREADY INSTALLED

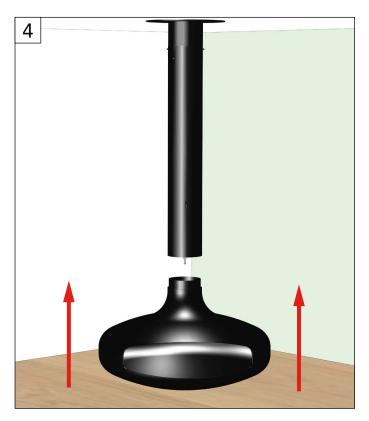

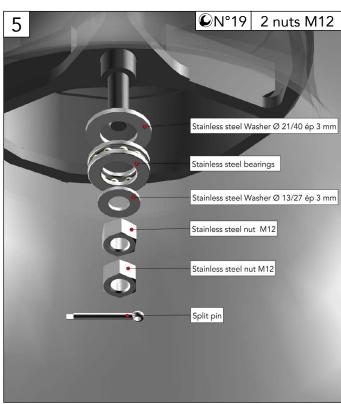

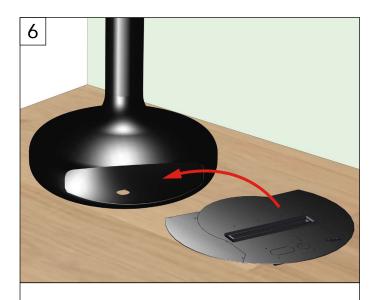

Once your fireplace is installed, please refer to the instructions for the installation of the ethanol burner.


RETRO-FIT: OPEN WOOD-BURNING DOMOFOCUS ALREADY INSTALLED

Damper rules

The damper, located on the flue, is used for both regulating and blocking the smoke flue during periods of non-operation. Before igniting, check the position of the damper, with the handle indicating the position of the damper. To change the position, pull the damper towards oneself, turn it slightly, and push it back to achieve one of the 4 possible positions of the flap disc inside the flue.

To ensure proper operation of the appliance and to benefit from the guarantee, it is **STRICTLY** forbidden to use position **0** as it would damage the burner.

We recommend using only positions **1** and **2**. Position **3** may cause excessive draw, potentially disrupting the flame; therefore, we advise not using it.

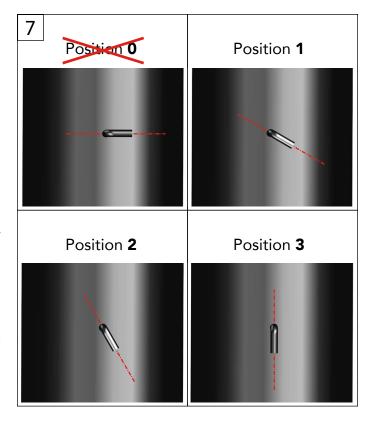



CREATE BEYOND CONVENTION

Focus - Atelier Dominique Imbert
3 impasse Claque Patin - Viols le fort - France
S.A.S with a capital of 102 355 euros
www.focus-creation.com

Email: info@focus-creation.com